


Quick Guide FluoMini Pro Optical CF Sensor

Display & buttons

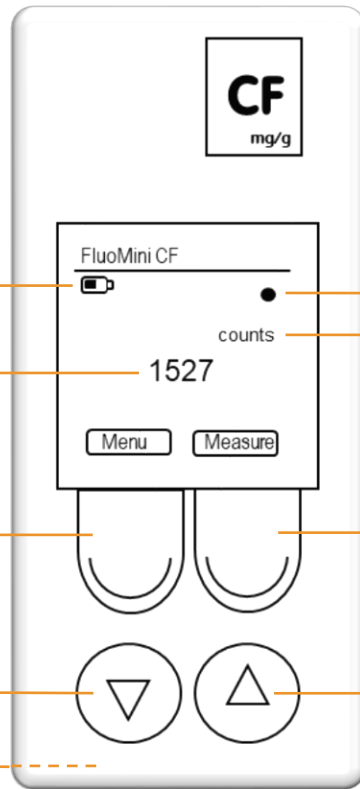

Battery

Measured CF

Menu/Exit button

Down button

Reset button (back)

Measurement indicator

Measurement units

Measure/Enter button

Up button

Menu/Exit button

Enter & exit main menu

Measure/Enter button

End sleep mode
Single measurement > press briefly
Start/stop continuous measurement > press 2 sec



Sendot





www.sendot.nl

Calibration

Apply reference sample

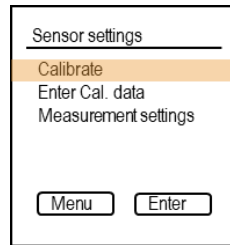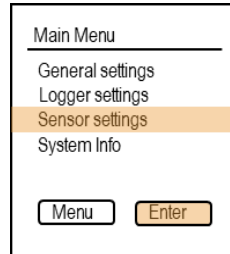




Choose between 1- or 2-point calibration

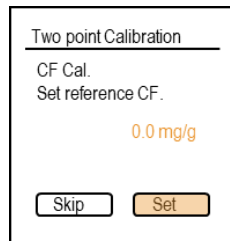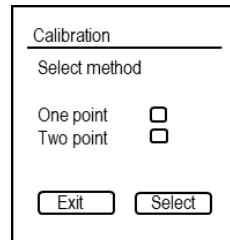




* Wait for a stable measurement

Log function

Set interval time

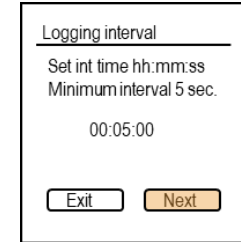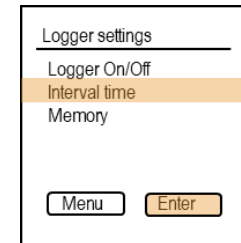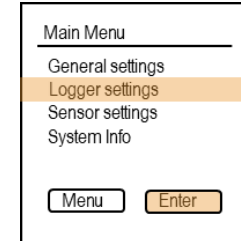



Start logging

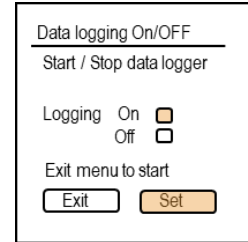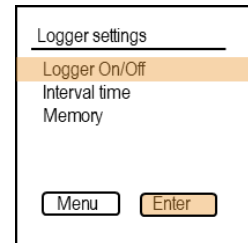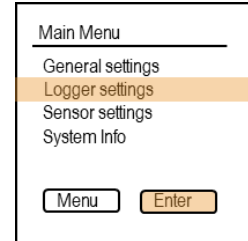

CAUTION!

When the probe touches the surface of the sample, it might get contaminated resulting in false measurements. Ensure to keep the tip of the probe clean. For further information read the manuals on our website.

Remove reference sample

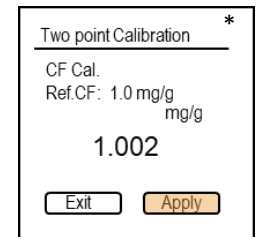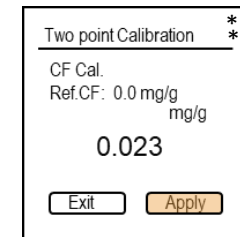

** Only for 2-point calibration